

# 2022 Mercedes-BENZ-E-Class-W212 Android Interface Installation Guide(NTG6.0)



1.Remove the armrest box screws



2.Remove the armrest box screws



3.Remove two screws from the control board



4.Take the two screws in the center of the armrest box



5.Remove the entire control board



6.Remove the two screws of the original main unit



7.Remove the left trim panel fixing screws



8.Remove the right trim panel fixing screws



9.Pry off the rear seat cup holder spacer with a buckboard



10.Remove the two screws of the water cup holder




11.Remove the water cup holder and take two more retaining screws



12.Remove the main unit after moving the left and right trim panels



13.One end of the decoder's LVDS cable connect to the car's main unit.

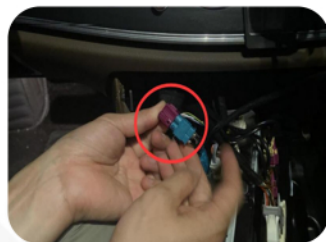

14.The other end connect to the original LVDS cable.



15.Connect the power cord



16.After the decoder is installed, screw the original main unit in place



17.Installation effect